



# THE MULTI-ROTI MAKER

Omelettes | Cheela | Dosa | Uttapams | Theplas | Khakhra



HOW TO USE



*Congratulations!*

*Dear Customer Welcome To Matangi Family Thanks for Choosing us and Helping Community.*

*Now Your Journey Begin with us.*

*We Have Manufactured this Multi Purpose Roti Maker with All Testing done to have  
You Prime Experience of the Product*

*This matangi Multi-purpose Roti Maker with Curved surface Non-stick granite coating makes your Life  
more convenient in cooking. This plug & Play device is easy to use. Now you can easily make Roti,  
Paratha, Sandwich, Thepla, Uttapams, Omelettes, Cheela, Dosa, Allo Tikki etc. at your best place.*

*This Matangi Multi Roti Maker comes with Three Years warranty so you can simply relax as we are just  
a call away. After that we continue provide you a support when ever you want.*

*Thanks for choosing us*

*Please read the instruction in the manual carefully, before use.*

## IMPORTANT SAFETY GUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Make sure that your mains voltage corresponds to the voltage stated on the specification sticker of the Matangi Roti maker.
2. Always unplug from mains socket when not in use and before cleaning.
3. Do not immerse appliance, cord or plug in water or any other liquid.
4. Do not operate the Matangi Roti Maker with a damaged cord or plug, or in abnormal state. If its main cord is damaged, it must be replaced by the nearest Regional Service Centre/ Authorised Service Centre/Authorised Service Agent.
5. Do not use any additional accessories that are not recommended by the company. It may result in fire, electric shock and/or personal injury.
6. Do not let the cord hang over edge of table or counter, or touch any hot surface.
7. To disconnect, remove plug from the wall outlet. Always hold the plug. Never pull the cord.
8. Do not use the appliance for uses other than its intended use and always place it in a dry area.
9. Do not leave the Matangi Roti Maker unattended while it is in operation.
10. Do not touch any hot surface. Use handle only.
11. Always place the appliance on a table or flat surface when operating.
12. There are no parts in your Matangi Roti Maker that are serviceable by the user. Unauthorized dismantling or servicing will void the Product warranty.
13. Metal foil packages or utensils must not be placed on the Matangi Roti Maker as they may cause fire or electric shock.
14. Matangi Roti Maker must not be used near or below curtains and other combustible materials.
15. Close supervision is necessary when children are around.
16. The appliance should be strictly used for domestic purposes only.

**SAVE THESE INSTRUCTIONS**

## KNOW YOUR MATANGI MULTIROTLMAKER



1. Handle
2. Knob
3. Heater On Indicator
4. Power Indicator-Red



5. Upper Non-stick Cooking Plate
6. Lower Non-stick Cooking Plate
7. Upper Housing
8. Lower Housing

### **BEFORE FIRST USE**

- Read all instructions carefully and keep them for future reference.
- Remove all packaging.
- Clean the cooking plates by wiping with a sponge or cloth dampened in warm water. **DO NOT IMMERSE THE UNIT IN WATER AND DO NOT POUR WATER DIRECTLY ONTO THE COOKING SURFACE.**
- Dry with a cloth or paper towel.
- Lightly coat the cooking plates with a little cooking oil.
- **NOTE: When your Matangi Roti Maker is heated for the first time, it may emit slight smoke or odour. This is normal with many heating appliances. This does not affect the safety of your appliance.**

### **CLEANING AND MAINTENANCE**

1. Disconnect the appliance from the mains outlet. Do not disassemble the Matangi Roti Maker for cleaning.
2. Let the appliance to completely cool down before you start cleaning.
3. Do Not immerse the Matangi Roti Maker in water or clean the appliance in running water.
4. Wipe the exterior surface with a soft, dry cloth. Never use scouring pads.
5. Clean the interior non stick surface with a soft damp cloth and then wipe it thoroughly with dry cloth.
6. Store the appliance in a cool dry place.
7. The power cord can be wrapped around the bottom of base for storing.

### **TECHNICAL SPECIFICATIONS**

<b>Model</b>	<b>Wattage</b>	<b>Voltage</b>
<b>Matangi Multi Roti Maker</b>	1000W	230V 50 Hz

## HOW TO USE YOUR MATANGI MUTLI ROTI MAKER

- Close the Roti Maker and plug it into the wall outlet, you will notice that the red indicator light and the green indicator light will switch on, indicating that the roti maker has begun preheating.
- It will take approximately 3 to 5 minutes to reach cooking temperature. The red indicator light will remain on until you unplug your roti maker. When the green indicator light goes off, the Roti Maker is ready for use.
- Open the Roti Maker and make each piece of about 1 ½" diameter. Slightly flatten it and place it towards the hinges on the bottom plate of the Matangi Roti maker as shown in the figure.
- **Note: To make soft rotis, add extra water than usual to the dough so that the dough is softer and stickier. Also set the dough aside for about 30 minutes to 1 hour before making rotis in the roti maker.**



- Quickly and firmly press down and close the upper plate. Hold for a few seconds and open it immediately. You will see the dough ball has flattened enough for making roti. Leave the Roti Maker in open position for about 15-20 seconds.



- After about 20-25 seconds turn the roti and you will see air bubbles begin to appear on the top surface of the roti.
- Now turn the roti to the other side and very gently shut the upper plate. The roti will start puffing up and in a few seconds it is ready for serving.



- Once the roti is cooked, open the Roti Maker and carefully remove it from the Roti Maker with a non-metallic spatula. Never touch the cooking surface with sharp, pointed or metal objects. This could damage the non-stick surface.  
Important: Every time you make roti, pre-heat the appliance until the green light goes off.
- Once you are finished cooking, disconnect the plug from the wall outlet and allow the Roti Maker to cool in open position.
- **This Matangi Multi Roti Maker can be used for preparing other dishes also like Omelletes, Parathas, Theplas, Pancakes, Uthappams etc. while keeping the Upper Non Stick Cooking plate open.**

## **PLEASE REGISTER YOUR PRODUCT**

If you register your product on our website or whatsapp this will ease you and us to get service on time.

**www.matangiappliances.com**

**Email: matangiappliances@gmail.com**

**Call / Whatsapp: 8920631573**



Contact us:

Note : If you register your product or like, follow / Comment us on are social media your are eligible for are monthly prize distribution. Also this will create a relationship with Matangi Appliances

**For more update/offers follow & like us on :**



**@matangiappliances**



## Warranty Card (Customer's Copy)

This page has to be treated as a full fledged warranty card and is required to be maintained by you. You will be required to produce this while claiming the service within the warranty period. In the unlikely event that a defect should develop in the Matangi Roti Maker during the period of this warranty, the product should be delivered at your cost to the Regional Service Centre/branches or Authorised Service Centre along with this warranty card.

Matangi Multi Roti Maker:

Date of purchase

Serial No:

Name: \_\_\_\_\_

Address: \_\_\_\_\_



Contact us:

Dealer's Stamp & Address  
Phone Number

## **Terms of Warranty**

Matangi (hereinafter referred to as the Company) warrants to the purchaser of “Matangi Roti Maker”, (hereinafter referred to as Matangi Roti Maker) that the said Matangi Roti Maker is free from all defects in material and workmanship. This warranty is valid for a period of three year from the date of original purchase, subject to the following terms and conditions:

1. The warranty card is to be completed, signed by the dealer immediately on purchase.
2. The Matangi Roti Maker is only to be serviced by the Company Regional Service Centre or by its Authorised Service Centre (Authorised Service Agent).
3. The customer shall carry the Matangi Roti Maker to the nearest Company Regional Service Centre/Authorised Service Centre at his/ her own cost and risk.
4. The Company shall make all endeavours/attempts to carry out the Service/Replacement under this Warranty at the earliest, but shall not be liable to do so within any specified time.
5. The Warranty will continue and remain in force only for the unexpired period of the original Warranty, in regard to the Repair/Replacement of parts of the Matangi Roti Maker.
6. The Matangi Roti Maker shall be used strictly for domestic purposes in accordance with the user's manual.
7. The Company shall not be held liable for any accident, loss or damage (direct or indirect) to person or property caused by reason of:
  - (a) Repairs/Service attended by unauthorised service person.
  - (b) Over-loading/ Misuse/abuse or/and negligence on the part of the person.
  - (c) Defects caused by improper/reckless use.
  - (d) Use of spurious spares/old, non-genuine spares.

- (e) Failure to comply with any safety precaution or maintenance tip suggested by the Company.
- (f) Original serial number is deleted/ defaced or altered.
- 8. The Company shall not be responsible for any special consequential damages or loss arising directly or indirectly for any delay in the performance of this Warranty.
- 9. The Company reserves the right to retain any part or component at the Regional Service Centre/branches or Authorised Service Centre or at its workshop and shall effect Repairs/Replacement or parts or components at its sole discretion.
- 10. The non-stick coating is not covered under this warranty.
- 11. This Warranty shall not in any case extend towards payment or any monetary consideration whatsoever, and shall be only limited to the product replacement.
- 12. Electrical parts are not covered under the warranty terms as they are subject to wear and tear. Replacement of these parts is chargeable.
- 13. Electrical appliances, wire points need regular check up by an authorised service person.
- 14. Electrical appliances are prone to voltage fluctuation risks, therefore precaution should be taken before use. Company shall not be responsible for any damage to electrical parts, arising out of this problem.
- 15. For repairs after the expiry of the warranty period, the authorised service centre will levy a charge (based on the MRP) for the component replaced.
- 16. The decision of the company is final in all cases of complaints.
- 17. Any complaints/ disputes shall be within the jurisdiction of the Courts of Delhi.

**MANUFACTURED / MARKETED BY : MG PRODUCTS PVT. LTD**  
**B-45, Street No. 12, Jagatpuri Extn., Delhi-110093**

**FOR SALES/SERVICE/FEEDBACK/QUERIES/COMPLAINT/BUSINESS ENQUIRY/DISTRIBUTION**

**MATANGI CARE :**

**MG PRODUCTS PVT. LTD**

**B-45, Street No. 12, Jagatpuri Extn., Delhi-110093**

**www.matangiappliances.com**

**Email: matangiappliances@gmail.com**

**Call / Whatsapp: 8920631573**

**For more update/offers follow & like us on :**



**@matangiappliances**



**Contact us:**

### **SALUTE TO ARMY**

If you buy Matangi Multi Roti Maker, it will not only help you but it will also contribute to the society. Because we will give ₹ 50 on the sale of every roti maker to the families of Shaheed in Indian army and Physically Challenged people. You can also see that how your contribution is changing people's lives on our social media handles. @matangiappliances So thank you very much for choosing us on behalf of all of them.

